



	PLAYER 1 (1...) GND	PLAYER 2 (2...) GND	PLAYER 3 (3...) GND	PLAYER 4 (4...) GND
PLAYER UP CONTACT	PLYR 1 UP LEFT JOY.	PLYR 2 UP LEFT JOY.	PLYR 1 UP RIGHT JOY.	PLYR 2 UP RIGHT JOY.
PLYR DOWN CONTACT	PLYR1 DWN LEFT JOY	PLYR2 DWN LEFT JOY	PLYR1 DWN RIGHT JOY	PLYR2 DWN RIGHT JOY
PLYR LEFT CONTACT	PLYR1 LEFT LEFT JOY	PLYR2 LEFT LEFT JOY	PLYR1 LEFT RIGHT JOY	PLYR2 LEFT RIGHT JOY
PLYR RIGHT CONTACT	PLYR1 RIGHT LEFT JOY	PLYR2 RIGHT LEFT JOY	PLYR1 RIGHT RIGHT JOY	PLYR2 RIGHT RIGHT JOY
PLYR SWITCH (SW1)	PLAYER 1 (1SW1)	PLAYER 2 (2SW1)	PLAYER 1 TAB KEY	PLAYER 2 TAB KEY
PLYR SWITCH (SW2)	PLAYER 1 (1SW2)	PLAYER 2 (2SW2)	PLAYER 1 ESCAPE KEY	PLAYER 2 ESCAPE KEY
PLYR SWITCH (SW3)	PLAYER 1 (1SW3)	PLAYER 2 (2SW3)		
PLYR SWITCH (SW4)	PLAYER 1 (1SW4)	PLAYER 2 (2SW4)		
PLYR SWITCH (SW5)	PLAYER 1 (1SW5)	PLAYER 2 (2SW5)		
PLYR SWITCH (SW6)	PLAYER 1 (1SW6)	PLAYER 2 (2SW6)		
PLYR SWITCH (SW7)	PLAYER 1 (1SW7)	PLAYER 2 (2SW7)		
PLYR SWITCH (SW8)	PLAYER 1 (1SW8)	PLAYER 2 (2SW8)		
PLAYER COINS	PLAYER 1 (1COIN)	PLAYER 2 (2COIN)		
PLAYER START	PLAYER 1 (1STRT)	PLAYER 2 (2STRT)		

**THIS IS MY GENERAL ELECTRIC CIRCUIT LINKS PLAN.
YOU CAN LINK THE MICROSWITCH'S AS YOU
WANT. BUT WE ARE NOT RESPONSIBLE FOR ALL
PROBLEM'S AND OTHER'S; AND YOU ACCEPT ALL TERMS.**